

QUICK GUIDE


Connecting your PTT Voice Responder to GroupTalk (Android) (EN)



A

Pairing your PTT Voice Responder with your smartphone via Bluetooth

1. Turn on your PTT Voice Responder by holding down the Power button for more than 3 seconds. After it is on, a blinking green light will indicate that the device is ready for pairing.
2. Turn on your smartphone's Bluetooth by going to: Settings → Bluetooth → Turn on.
3. Pair your PTT Voice Responder to your smartphone by selecting it from the 'Available devices' list. To know which device to select from the list, check the unique friendly name on the back of your Voice Responder. Once it has successfully paired, a blue light will begin blinking on your device.

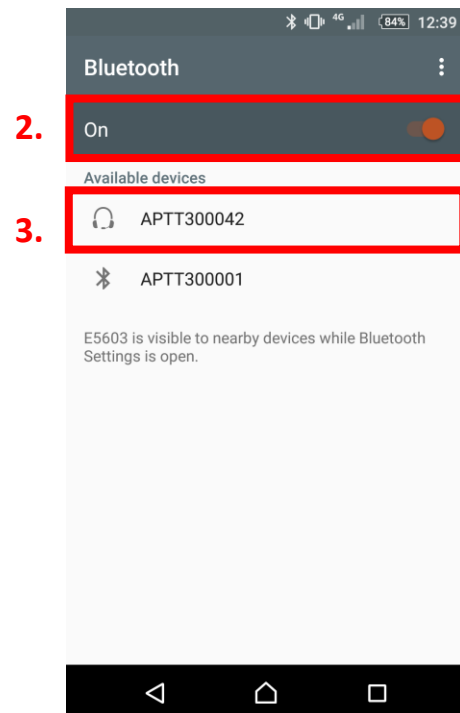


NOTE: The Voice Responder can only be paired with one device at a time. If you want to pair it to another device you need to perform an **Unpairing/ Software reset** by pressing and holding both soft buttons and both PTT buttons simultaneously, until the LED blinks once in yellow.



B

Enabling your PTT Voice Responder within GroupTalk

1. Select the 'Settings' tab.
2. From the list that appears, first make sure that 'Bluetooth buttons' is ticked.
3. Then select 'Bluetooth LE buttons'.
4. Click on the name of your device and select 'Use device'.

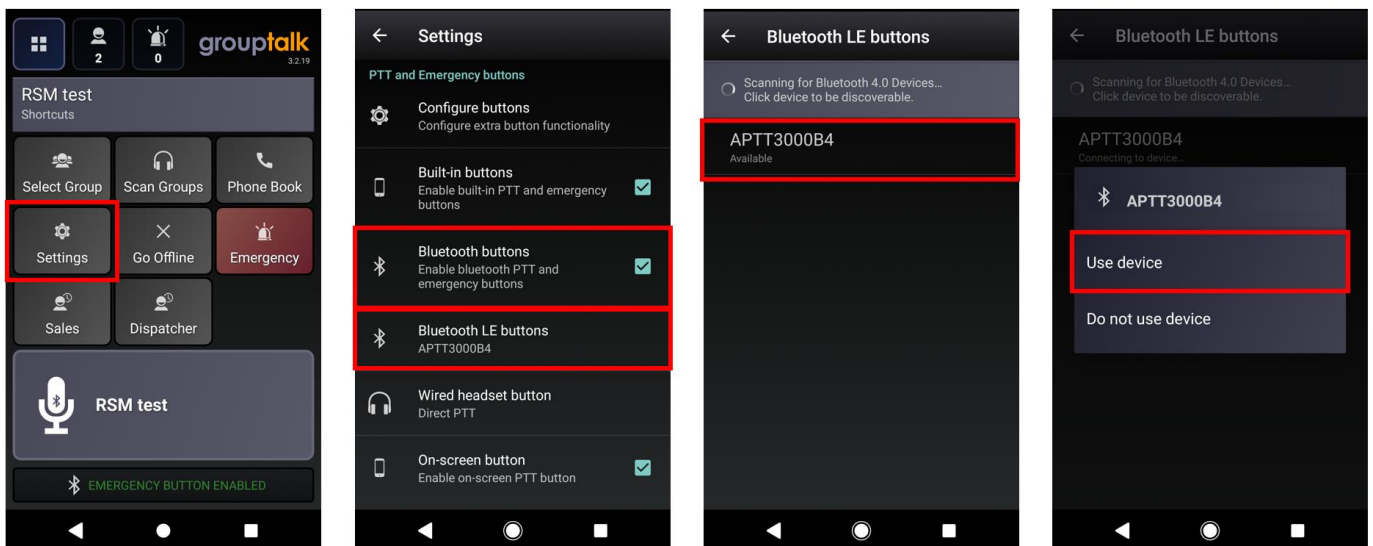

The PTT Voice Responder will now be linked to the application, and will automatically connect whenever GroupTalk is online.

For more information on how to use the GroupTalk application please visit their website www.grouptalk.com or take a look at their user guides from www.grouptalk.com/support




C

Functions available

GroupTalk (Android) allows its users to configure all the buttons in the Voice Responder to serve different purposes (eg. Alarm, Next Group, Queue, Repeat message). Follow these simple steps to configure and choose the functions of all of your Voice Responder's buttons:

1. Select the 'Settings' tab.
2. From the list, select 'Configure buttons'.
3. Select the button you would like to configure.
4. Select its new function.

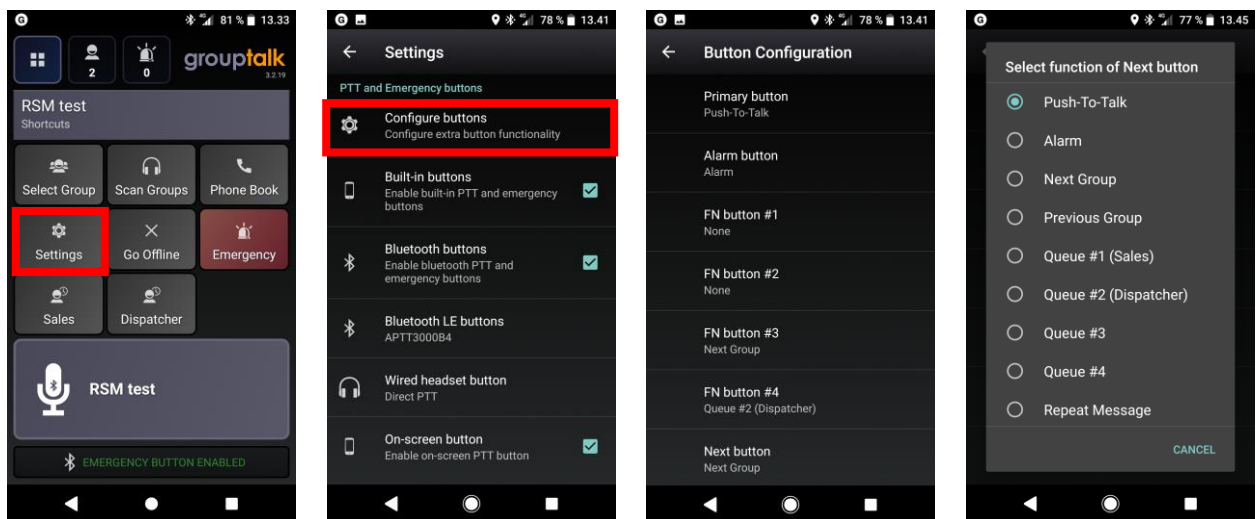

Note! The Voice Responder's:

- PTT1 button = Primary button
- PTT2 button = FN button #1
- Emergency = Alarm button
- Arrow (pointing right) = Next button
- Arrow (pointing left) = Previous button

Visit www.aina-wireless.com to find additional accessories, an extended user manual of the AINA PTT Voice Responder and more user guides. If you have any further questions, you can also email us at: info@aina-wireless.com

