

QUICK GUIDE


Connecting your PTT Voice Responder to GroupTalk (iOS) (EN)



A

Pairing your PTT Voice Responder with your iPhone via Bluetooth

1. Turn on your PTT Voice Responder by holding down the Power button for more than 3 seconds. After it is on, a blinking green light will indicate that the device is ready for pairing.
2. Turn on your iPhone's Bluetooth by going to: Settings → Bluetooth → Turn on.
3. Pair your PTT Voice Responder to your iPhone by selecting it from the Devices list. To know which device to select from the list, check the unique friendly name on the back of your Voice Responder. Once it has successfully paired, a blue light will begin blinking on your device.

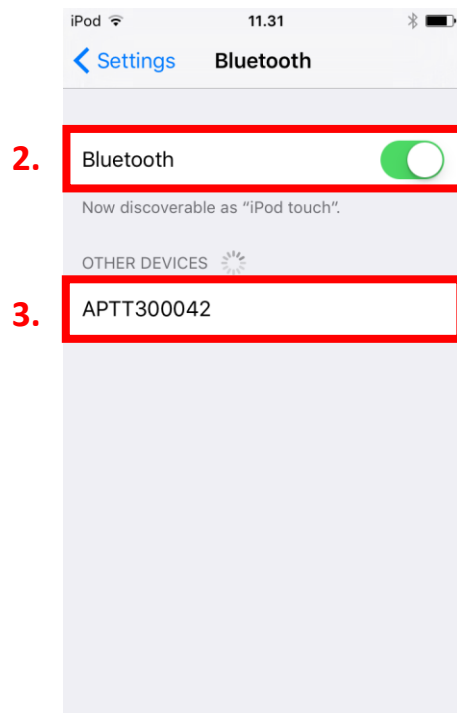





NOTE: The Voice Responder can only be paired with one device at a time. If you want to pair it to another device you need to perform an **Unpairing/ Software reset** by pressing and holding both soft buttons and both PTT buttons simultaneously, until the LED blinks once in yellow.



B

Enabling your PTT Voice Responder within GroupTalk

1. Select the 'Settings' tab.
2. From the list that appears, first make sure that 'Bluetooth audio' is on (green).
3. Then select 'Bluetooth 4.0 buttons'.
4. Accept the pairing.
5. Click on the name of your device and select 'Use device'.

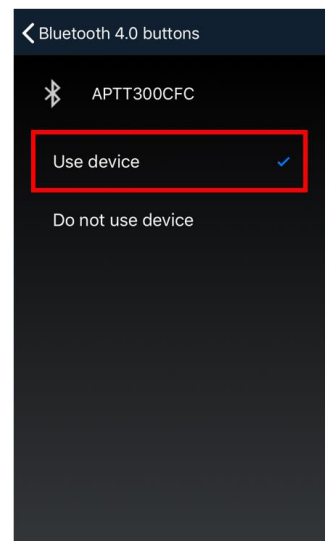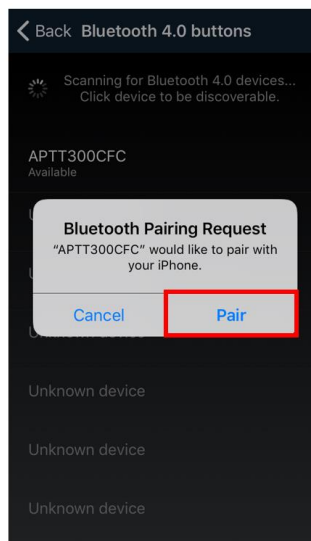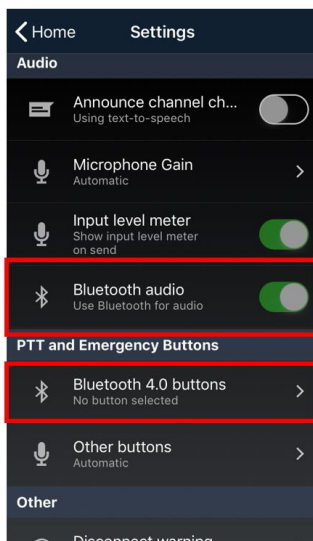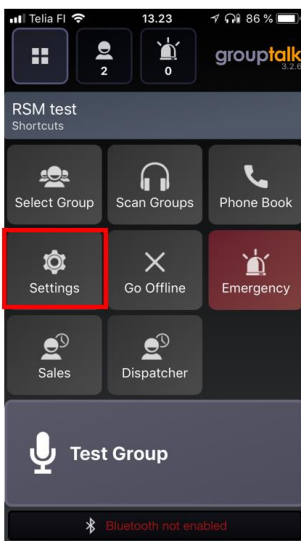

The PTT Voice Responder will now be linked to the application, and will automatically connect whenever GroupTalk is online.

For more information on how to use the GroupTalk application please visit their website www.grouptalk.com or take a look at their user guides from www.grouptalk.com/support



C

Functions available

PTT1 button – Press and hold to speak to chosen contact/group. Release when you are done.

PTT2 button - Press and hold to speak to chosen contact/group. Release when you are done.

Emergency button – Press and hold the Emergency button for about three seconds, until you hear two short beeps and the emergency alarm is activated. This feature must be configured by your administrator for your account before it will be available and visible in the app. To set this up, please visit: www.grouptalk.com/support

Arrow buttons – Press either arrow button to scroll through the groups.

Visit www.aina-wireless.com to find additional accessories, an extended user manual of the AINA PTT Voice Responder and more user guides. If you have any further questions, you can also email us at:
info@aina-wireless.com

