

QUICK GUIDE


Connecting your PTT Smart Button
to GroupTalk (iOS) (EN)



A

Pairing your PTT Smart Button to GroupTalk

1. Turn on Bluetooth on your iPhone.
2. Press all 3 buttons on the PTT Smart Button simultaneously.
3. In the GroupTalk application, select the 'Settings' tab.
4. Then select 'Bluetooth 4.0 buttons'.
5. Click on the name of your device.
6. Select 'Use device'.
7. Accept the pairing request (Note! This request might appear earlier in the process).

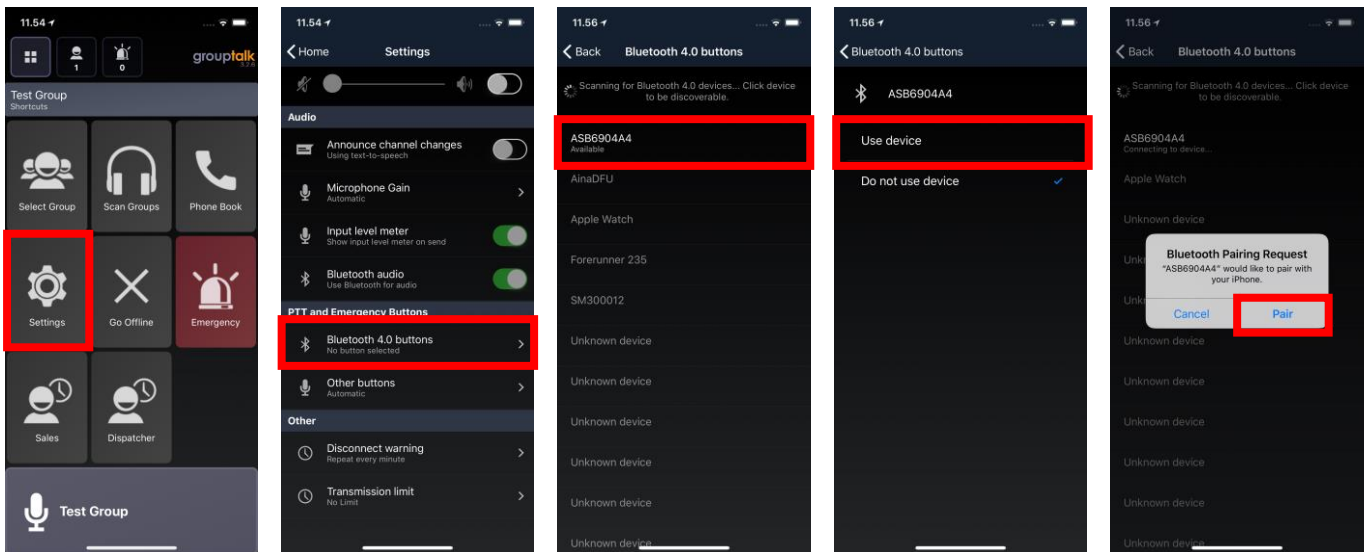

NOTE: The Smart Button can only be paired with one device at a time.




B

Functions available

PTT1 button – Press and hold to speak to chosen contact/group. Release when you are done.

PTT2 button - Press and hold to speak to chosen contact/group. Release when you are done.

Emergency button – Press and hold the Emergency button for about three seconds, until you hear two short beeps and the emergency alarm is activated. This feature must be configured by your administrator for your account before it will be available and visible in the app. To set this up, please visit: www.grouptalk.com/support

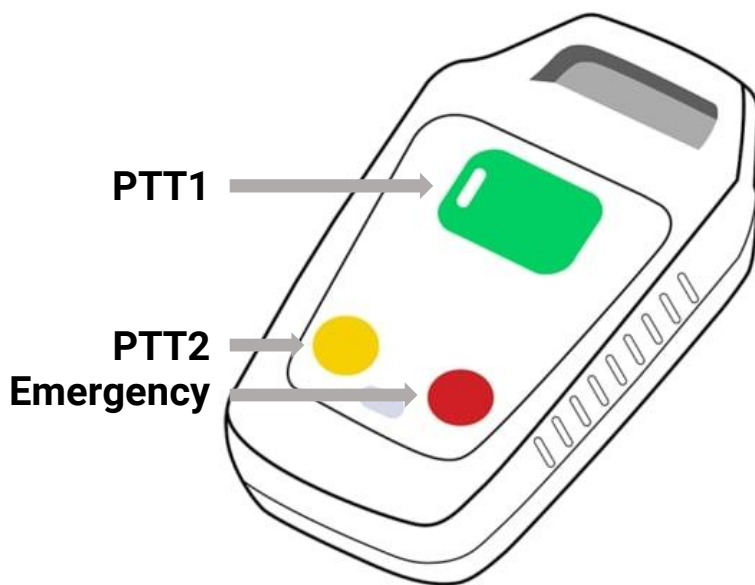

Visit www.ainaptt.com to find additional accessories, an extended user manual of the AINA PTT Smart Button and more user guides. If you have any further questions, you can also email us at: sales@ainaptt.com

