

# QUICK GUIDE





Connecting your PTT Smart Button  
to Zello (iOS) (EN)



# A

## Pairing your PTT Smart Button to Zello

1. Turn on Bluetooth on your smartphone
2. Press all 3 buttons on the PTT Smart Button simultaneously
3. In the Zello application, select the three horizontal lines displayed on the top left corner, and from the list select Options
4. Select 'Push to talk button'.
5. Select 'Wireless Zello button'
6. Turn this function on
7. Select your device from the list and/or accept the pairing request

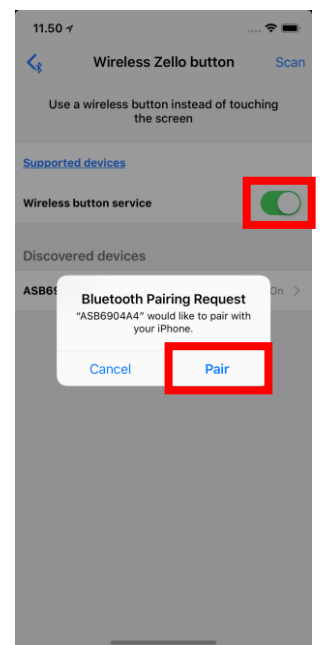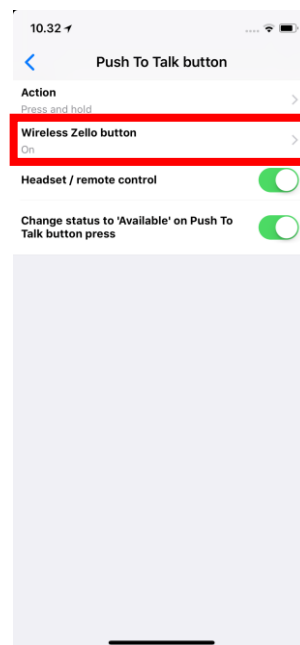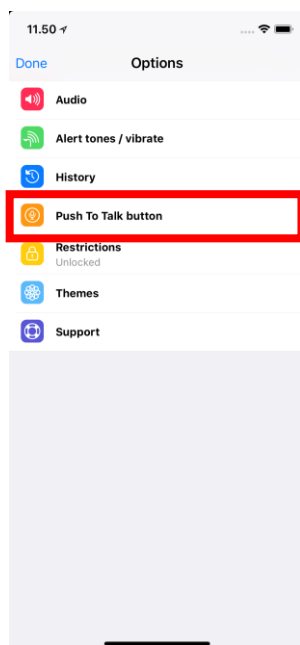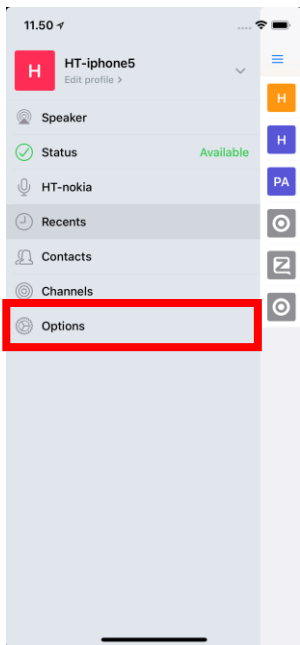

**NOTE:** The Smart Button can only be paired with one device at a time.




# B

## Functions available

**PTT1 button** – Press and hold to speak to chosen contact/channel. Release when you are done.

**PTT2 button** – Press and hold to communicate with a pre-assigned contact/ channel. Assign the PTT2 button by selecting a user or channel on Zello, and press both PTT buttons simultaneously. A confirmation message will appear saying: “PTT button mapped to [contact/channel]”.

**Emergency button** – Press to send a call alert to a pre-assigned contact/ channel. Assign the emergency button by selecting a user or channel on Zello, and press both the emergency and PTT1 button simultaneously.

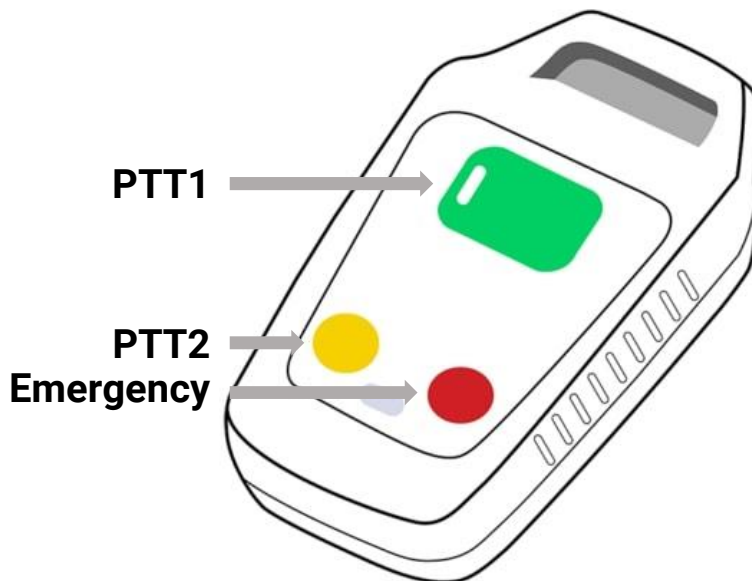

Visit [www.ainaptt.com](http://www.ainaptt.com) to find additional accessories, an extended user manual of the AINA PTT Smart Button and more user guides. If you have any further questions, you can also email us at: [sales@ainapt.com](mailto:sales@ainapt.com)

