

QUICK GUIDE


Connecting your PTT Voice Responder to ESChat (Android) (EN)



A

Pairing your PTT Voice Responder with your smartphone via Bluetooth

1. Turn on your PTT Voice Responder by holding down the Power button for more than 3 seconds. After it is on, a blinking green light will indicate that the device is ready for pairing.
2. Turn on your smartphone's Bluetooth by going to: Settings → Bluetooth → Turn on.
3. Pair your PTT Voice Responder to your smartphone by selecting it from the 'Available devices' list. To know which device to select from the list, check the unique friendly name on the back of your Voice Responder. Once it has successfully paired, a blue light will begin blinking on your device.

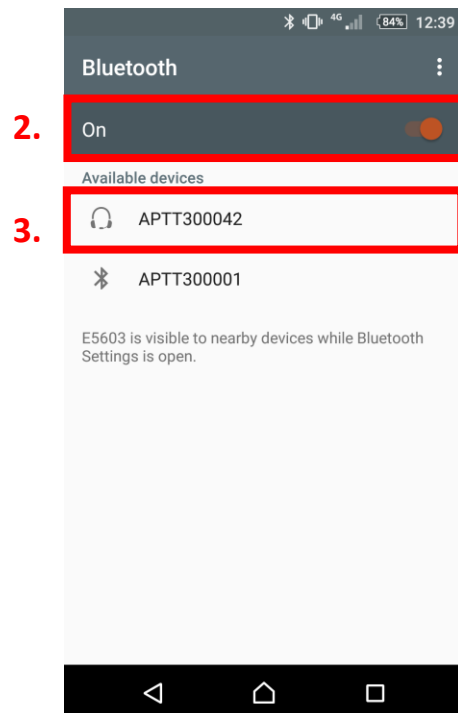


NOTE: The Voice Responder can only be paired with one device at a time. If you want to pair it to another device you need to perform an **Unpairing/ Software reset** by pressing and holding both arrow buttons and both PTT buttons simultaneously, until the LED turns off.



B

Connecting your PTT Voice Responder to ESChat

1. In the ESChat application, tap on the three vertical dots displayed on the top right corner and select 'Settings'.
2. Near the bottom of the list tick 'Allow Bluetooth Audio' and 'Bluetooth Always On'.
3. At the bottom of the list, select 'Headset Sound Profile'.
4. Then, 'Headset Type' from the top of the list that appears.
5. Select 'Bluetooth SPP'.

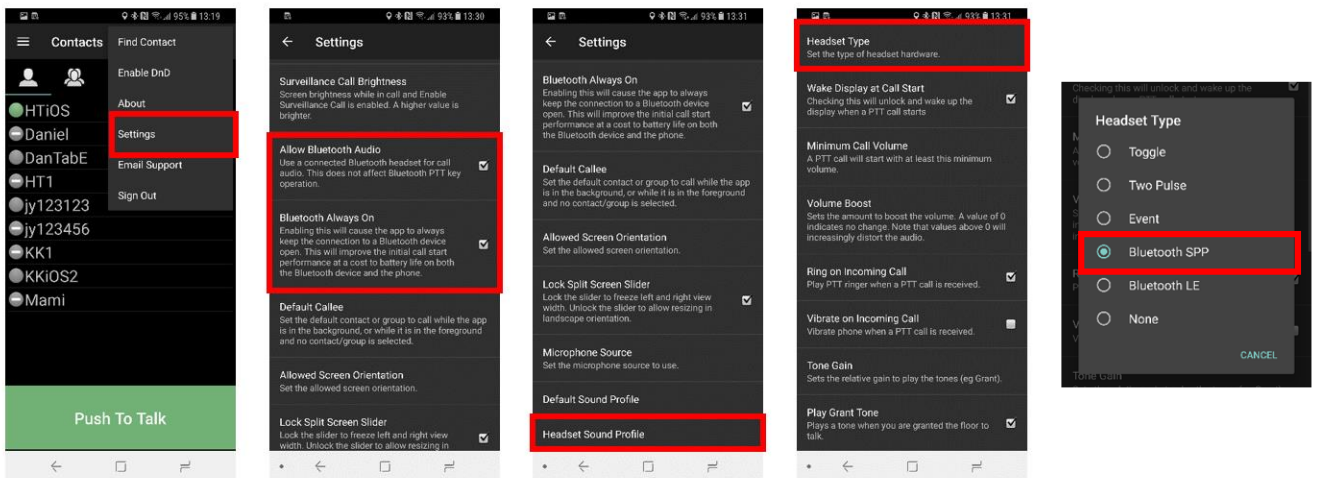

For more information on how to use the ESChat application please visit their website:
www.eschat.com



AINA PTT Voice Responder's main button functions when connected to ESChat



Button	Function
Power ON/ OFF	Press for more than 3 seconds to turn the device on/off.
Primary PTT	Press and hold to speak. Release when you are done.
Emergency	Press to send an emergency alarm. This feature must be configured by your administrator for your account before it will be available and visible in the app. To set this up, please read the following instructions: https://blog.aina-wireless.com/eschat-integrates-new-emergency-call-feature
Arrow buttons	Press the right arrow button to select the next channel (group) and the left arrow button to select the previous one.

Visit www.aina-wireless.com to find additional accessories, an extended user manual of the AINA PTT Voice Responder and more user guides. If you have any further questions, you can also email us at: sales@aina-wireless.com

