

QUICK GUIDE


Connecting your PTT Voice Responder to TASSTA (iOS) (EN)



A

Pairing your PTT Voice Responder with your iPhone via Bluetooth

1. Turn on your PTT Voice Responder by holding down the Power button for more than 3 seconds. After it is on, a blinking green light will indicate that the device is ready for pairing.
2. Turn on your iPhone's Bluetooth by going to: Settings → Bluetooth → Turn on.
3. Pair your PTT Voice Responder to your iPhone by selecting it from the Devices list. To know which device to select from the list, check the unique MAC-address on the back of your Voice Responder. Once it has successfully paired, a blue light will begin blinking on your device.

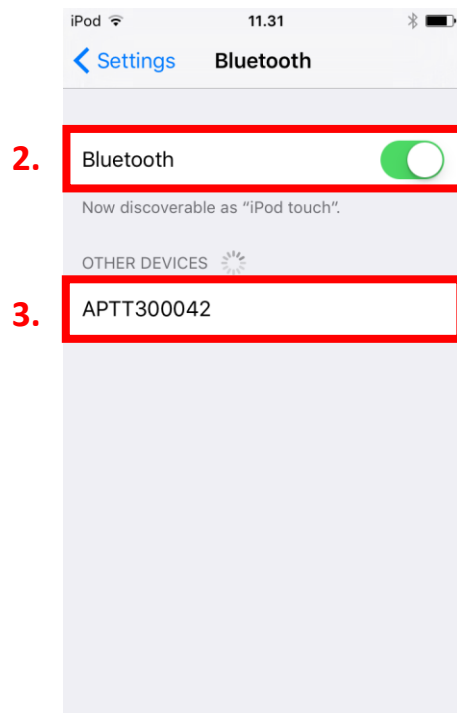


NOTE: The Voice Responder can only be paired with one device at a time. If you want to pair it to another device you need to perform an **Unpairing/ Software reset** by pressing and holding both soft buttons and both PTT buttons simultaneously, until the LED blinks once in yellow.



B

Connecting your PTT Voice Responder to TASSTA

4. Select the three horizontal lines at the top left corner and select 'Settings' from the list.
5. From the Settings list, turn on 'Initiate BT Connection'.
6. Then, select 'Preferred BT Device'.
7. Select your PTT Voice Responder (according to friendly name) and accept the Bluetooth Pairing Request.
8. You will see from the 'Preferred bluetooth device' menu that your device is now 'Connected'.

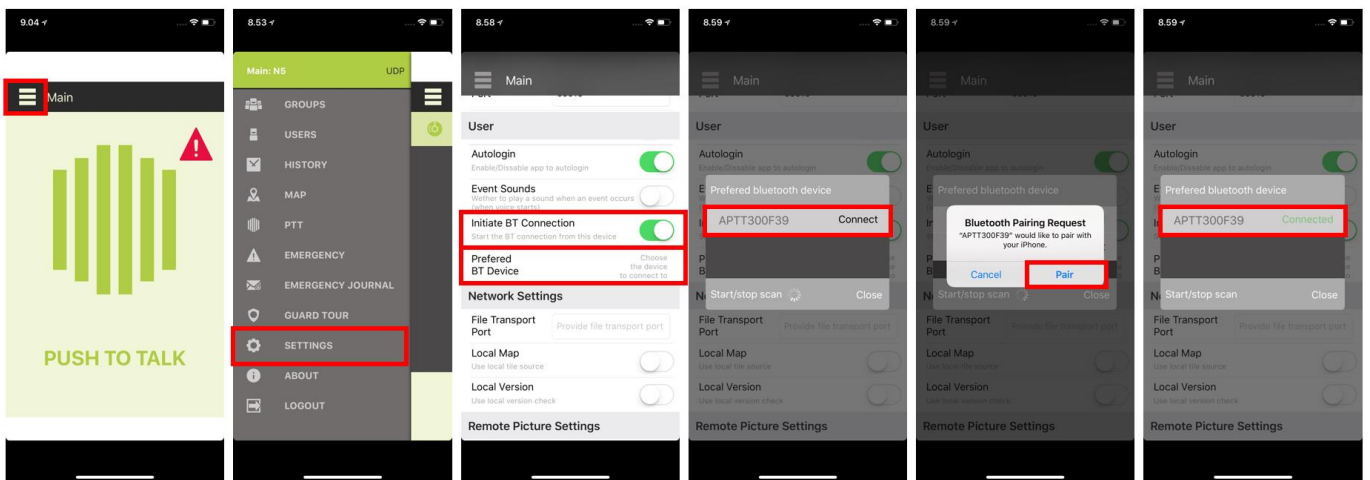

If you cannot find your PTT Voice Responder from the list, make sure that your Voice Responder is still connected to your iPhone via Bluetooth (the LED should be blinking in blue). If it is not, perform part A again.



C

Functions available

PTT1 button – Press and hold to speak to chosen contact/group. Release when you are done.

Emergency button – Press to send an emergency call.

Arrow buttons – Press either arrow button to change group.

Visit www.aina-wireless.com to find additional accessories, an extended user manual of the AINA PTT Voice Responder and more user guides. If you have any further questions, you can also email us at:
info@aina-wireless.com

