

QUICK GUIDE


Connecting your PTT Voice Responder
to Tactilon Agnet (Android) (EN)



A

Pairing your PTT Voice Responder with your smartphone via Bluetooth

1. Turn on your PTT Voice Responder by holding down the Power button for more than 3 seconds. After it is on, a blinking green light will indicate that the device is ready for pairing.
2. Turn on your smartphone's Bluetooth by going to: Settings → Bluetooth → Turn on.
3. Pair your PTT Voice Responder to your smartphone by selecting it from the 'Available devices' list. To know which device to select from the list, check the unique friendly name on the back of your Voice Responder. Once it has successfully paired, a blue light will begin blinking on your device.

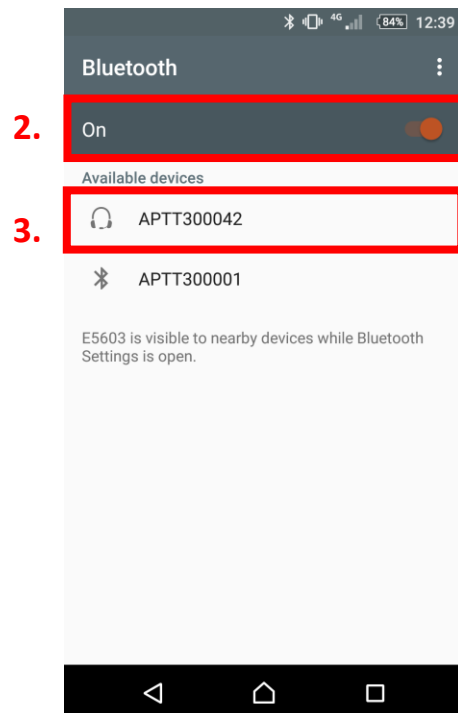


NOTE: The Voice Responder can only be paired with one device at a time. If you want to pair it to another device you need to perform an **Unpairing/ Software reset** by pressing and holding both arrow buttons and both PTT buttons simultaneously, until the LED turns off.



B

Connecting your PTT Voice Responder to Tactilon Agnet

1. In the app, go to Settings and select Accessories.
2. Turn on 'Wireless button'.
3. The app will begin to search for available Bluetooth devices. Select your PTT Voice Responder from the list (using the friendly name on the back of the device).

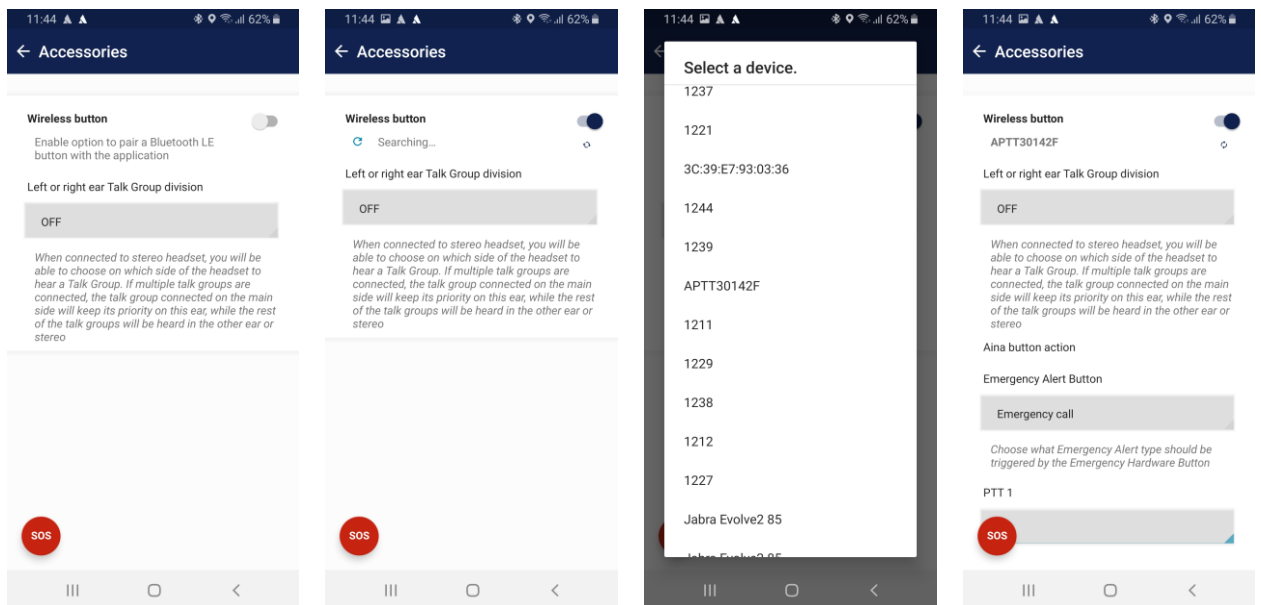

For more information on how to use the Tactilon Agnet application please visit:
www.securelandcommunications.com/tactilon-agnet

